

 
T VIEW

D760BD



7" Widescreen Color LCD Monitor With DVD Player

- Please read the manual in detail before using this product.
- This product is made of precision components, keep it away from moisture.

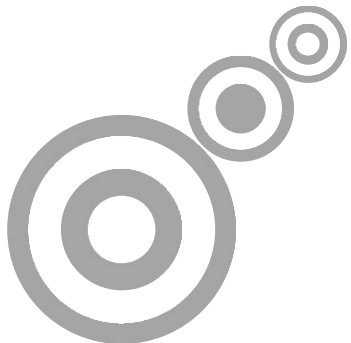










D760BD

TABLE OF CONTENTS

Safety Precautions.....	1
Main Features.....	2
Unit Rear Side Connection.....	3
Wiring Diagram.....	4
Instruction for install and uninstal face panel.....	4
Appearance And Functions.....	5
Remote Control Operation.....	6
Basic Operation.....	7
Touch Screen Menu And Operation.....	8
Radio Function Interface.....	9
Bluetooth function system.....	9
DVD Mode Menu Interface.....	10
USB/SD Operation.....	11
System Menu Setup.....	12
Common Menu Setup.....	12
Audio/Video Menu Setup.....	13
DVD System Setup.....	14
Function Index Sign.....	16
Warning.....	17
Trouble Shooting.....	18

SAFETY PRECAUTIONS

-  This product without waterproof function. To avoid the risk of fire breakout or electric shock, please do not expose this unit in the rain or moist environment. Do not open the cabinet. Such operation will absolve relative maintenance guarantee. Only the legally authorized professionals are allowed to conduct such operation.
-  **LASER:** This unit installs a laser system. To ensure proper use of this product, please read this owner's manual carefully before operating this unit and keep it for future reference. If the unit requires maintenance, please contact an authorized professional. Please operate according to correct process in order not to hurt by laser beam.
-  Please use this unit at normal temperature. Do not put the unit under -10 degree or higher than +60 degree environment. Otherwise it will distort the plastic shell, debase the display quality and products quality.
-  Installation should be very tight and secured to prevent the fallen unit hurt people and damage the unit when moving on or a sudden brake.
-  Please install carefully to avoid damaging working platform. Please clean the internal working platform, and ensure sufficient space for installation. Inner shell will be installed on the working platform. Then install the mainframe, connecting the power and video signals jack, then put mainframe into the shell. Then assemble the shell with the mainframe device.
-  Please do not try to repair display device by yourself. It is made up of many precision electronic elements, and any dismantlement or refit will make it damaged or broken. If any problem on the unit, please switch off the power immediately, and consult your nearest seller or distributor.
-  Please keep the monitor away from the pollution of moisture, dust, water soot etc. Please switch off the power immediately if any moisture or other objects pollute, please contact the seller or distributor.
-  If you drive with the sound at a level preventing you from hearing sounds outside the car please keep the unit at an appropriate sound level, otherwise this may affect your driving and cause an accident.
-  For your safety, please do not watch or operate the monitor when you are driving.

Preface

 
Thank you for your support of the company's products and options. This unit is crystallization of the modern high-tech. It is a cross-functional player mode and adjustable true color LCD Automatic retractable screen LCD touch screen. Allows you to be arbitrary choice To appreciate the program. Here, we wish you to personally experience this high-tech products can be Perfect fun and enjoyment.

To ensure proper use of this product, please read this owner's manual carefully before operating this unit and keep it for future reference.


MAIN FEATURES

1. 7" Wide screen TFT LCD high-definition media player monitor.
2. This unit is with touch icon interface and touch button icon.
3. DVD/RADIO/AUX/USB/SD/BLUE/CAR BACK function build in.
4. DVD/VCD/MP3/CD/MPEG compatible.
5. FM/AM digital synthesizer tuner with 30 memory presets.
6. Intelligentize bluetooth function, for you to make and answer the phone comfortably.
7. Built-in power 4X60W power amplifier, 4 way RCA stereo audio output, can connect to external audio device.
8. Signal: 1 video output, 1 video input.
9. Under car reverse mode, can auto switch to the reversing mode, if connect to the camera, can observe the back side of car to ensure the safety.
10. Menu language: CHINESE/ ENGLISH display.
11. Menu function: all function is operated by OSD menu.
12. Display system: AUTO/ PAL/ NTSC.
13. Video mode: Brightness/ Standard/Soft/Sharp four preset video mode.
14. Auto memory: all the feature or position adjustment can be auto memoried and will auto resume.
15. Display panel adjust: Panel angle can be adjustable.
16. Support USB/SD card to play MP3/MP4/WMA/AVI/JPEG media format.
17. Remote control: full function remote control operation
18. Picture pixel: 480*3(R.G.B)*234
19. Power: DV+12V/±10%; Low power consumption : ~25W
20. Working Temp: -10°C~60°C
21. Max Current:10 A
22. This unit has anti shock function

Unit Rear Side Connection

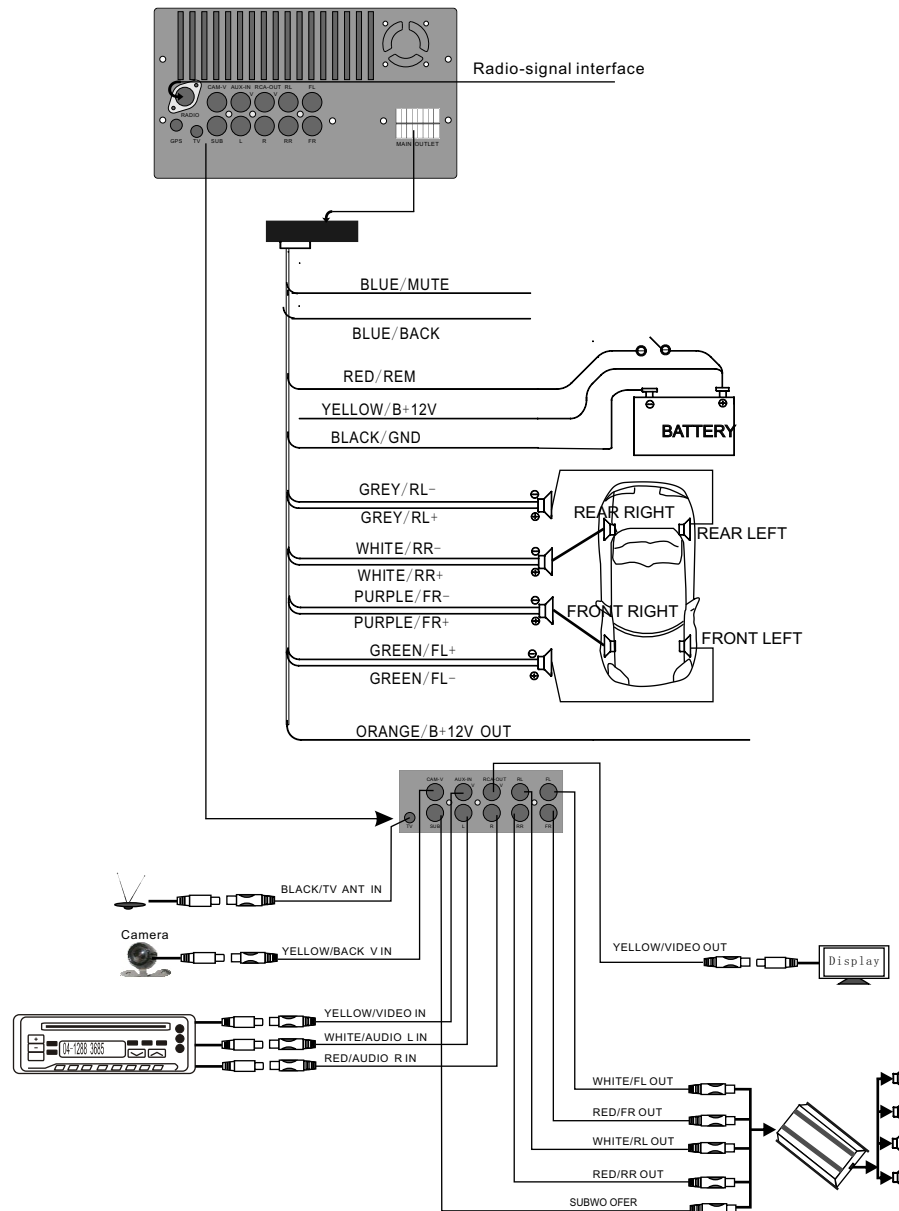

WIRING DIAGRAM

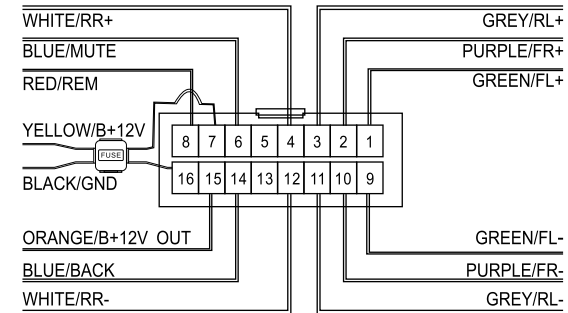

- 1.(GREEN) FL+::Front left audio output (positive pole)
- 2.(PURPLE) FR+: Front right audio output (positive pole)
- 3.(GREY) RL+: rear left audio output (positive pole)
- 4.(WHITE) RR+: rear right audio output (positive pole)
- 6.(BLUE) MUTE: Mute control cable
- 7.(YELLOW) B+12V: Power cable
- 8.(RED) REM: Trigger power
- 9.(GREEN) FL-: Front left audio output (cathode)
- 10.(PURPLE) FR-: Front right audio output (cathode)
- 11.(GREY) RL-: rear left audio output (cathode)
- 12.(WHITE) RR-: rear right audio output (cathode)
- 14.(BLUE)BACK: Car reversing cable
- 15.(ORANGE) 12V OUT: Power output
- 16.(BLACK)GND: connect to ground.

Instruction for install and uninstall face panel:


The front panel is for security design, the front panel is available for detachable or portable.

Take out of the frame, Press the button " " on the bottom of the unit, The bottom of the panel will automatically pop up, then gently press down the top of the panel and move out until the panel snaps out of the top of the machine card bit, then gently lift up the panel, then you can remove the panel easily.

Snaps the top of the panel into the corresponds to the card bit in the machine, pushes the bottom panel, until the panels fits closely with the machine, then sets the cover frame.




APPEARANCE AND FUNCTIONS

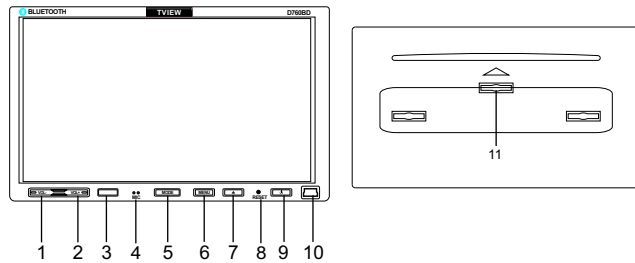


1. VOL- : Control for the volume reduce, and can use for MENU adjustment.
2. VOL+ : Control for the volume increase, and can use for MENU adjustment.
3. remote control window
4. MIC: Microphone
5. MODE: display mode switch. (RADIO/DVD/USB/SD/AUX/BLUE)
6. MENU: Menu adjustment
7. ▲ : Disc eject
8. RESET : Reset button
9. ⏻ : Power on / off button
10. Mini USB connector
11. SD card reader

Replacing the battery


1. Insert your finger nails into A and B on the diagram below, press A according to the direction, then pull out the battery holder.

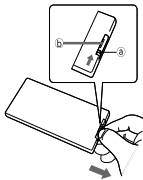

3. Fit the battery holder back to its place.

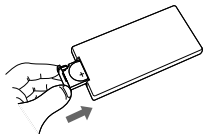

2. Remove the old battery, then insert the new battery into the battery holder with the + side facing upwards.

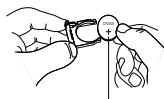


Lithium battery (Cr2025)

Note:

To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control unit for long periods of time (one month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.

Remote Control Operation

1. ⏻ Power
Press this button to turn on/off the unit.
2. ⏮ PLAY/PAUSE
3. 🔇 MUTE
4. Cursor direction key ↑ ↓ ← →
Press this button to move cursor to left/right/up/down.
5. SYSTEM SELECT: AUTO/NTSC/PAL
6. ENTER
7. VOLUME: VOL+/VOL-
8. PREV: SEEK- ⏮ /SEEK+ ⏭
9. ST/PROG
Program play track order
10. OSD
Press it to display the disc information.
11. SEL
Sound selection function
12. AMS/RPT
FM mode, long-press for auto search, short-press for channel browse; TV mode, long-press for auto search, short-press for manual search; DVD mode, press for single song play or single song repeat.
13. LOC/AF/RDM
Under DVD mode, press it for play song by production system.
14. NUMBER
Song choose
15. AUDIO choose mode.
16. MENU display
17. Language select
19. MODE: Switch mode.
20. ⏹ : STOP/PLAY
21. ANGLE
22. SLOW: slow forward/ slow playing

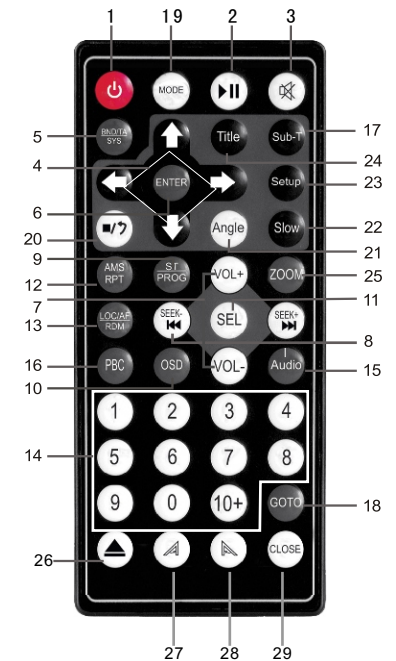

23. SETUP
DVD system setup.
24. TITLE
Back Disc Title.
25. ZOOM
Press it can zoom or shrink picture displayed
26. ▲ : Eject button
Press this button to eject or enter the disc.
27. ▲ Display panel slip out
28. ▲ Display panel retract
29. CLOSE: press it, the monitor will auto-extend or return




 


Precautions before using remote control unit

1. Please pull out the PVC when the remote control unit is first using.
2. Don't drop or step on remote control unit or subject it to shocks.
3. Note that it maybe impossible to operate the main unit if there are obstacles between it and the remote sensor.
4. Using the remote control unit within the specified operating range.

Remote control unit operating range

Horizontal: ±30 degree
Vertical: ±30 degree
Distance: 6M


 
 
BASIC OPERATION

- Power on /off**
Press the “” button on panel or remote control, enter into power on condition, pressing this button again to turn off the unit.
- PLAY/PAUSE**
On normal play disc mode, press this “” button to pause. Press this button again to continue playing.
- STOP**
On normal display mode, press to stop playing, press “PLAY” button to resume playing.
- DISC IN /OUT** 
When flip down the front panel, press to eject / load the disc.
- Adjust panel angle**
Press “” “” button on remote control, can adjust the panel angle.
- MUTE control**
Press “” button on remote control to turn off the sound. Press it again will resume the previous volume level.
Note: there are some functions no work when mute
- Function mode switch**
Press “MODE” button on panel or remote control, then can switch the DVD, AUX, RADIO, BLUE, SD/USB mode. But If the unit without disc/SD inside, can't enter to DVD/SD mode.
- “” “




07**

Hint: T is for Title, C is for Chapter of DVD disc. DVD disc is divided into several parts called Title. Then title is divided into chapter;

Normally one movie only corresponding to one title. CD disc is divided into several setlists. For KARAOKE disc one music corresponding to one title.

Use the    and number button, to input the corresponding title, chapter, same as the picture showing:

编程		
T	C	T C
1-- : ---	5-- : ---	9-- : ---
2-- : ---	6-- : ---	10-- : ---
3-- : ---	7-- : ---	11-- : ---
4-- : ---	8-- : ---	12-- : ---
播放	清除	退出

   Use    move cursors to “play”, press “enter” button, the unit starts playing according to program list. Press “Play/Pause” button or choose “Exit” button, press “enter” to exit.


编程		
T	C	T C
1 01 : 001	5-- : ---	9-- : ---
2 02 : 002	6-- : ---	10-- : ---
3-- : ---	7-- : ---	11-- : ---
4-- : ---	8-- : ---	12-- : ---
播放	清除	退出

NOTE:

- The program list will auto cancel when the main unit is power off or eject the disc to replay.
- There is no program function for some discs.
- The unit can not play the list if you select the title or chapter that does not exist in the disc.

TOUCH SCREEN MENU AND OPERATION

Press “MODE” button on panel or remote control to choose function display pictures: see below picture

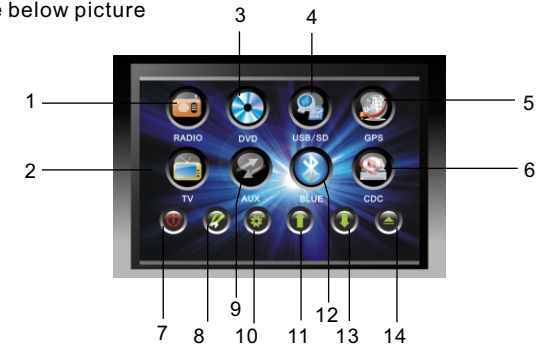


- | | |
|--|--------------------------------|
| 1.RADIO: FM/AM radio mode | 7.POWER |
| 2.TV function mode (optional function) | 8.Enter to common menu setting |
| 3.DVD mode (have disk can be entering) | 9.AUX: Video mode input |
| 4.USB/SD:USB signal input mode | 10.Enter to MENU setting |
| 5.GPS: navigation mode (optional function) | 11.Panel angle upward |
| 6.CDC: CDC mode (optional function) | 12.BLUE: BLUE TOOTH function |
| | 13.Panel angle down |
| | 14.Disc eject |

Note: This product “GPS” and “TV” functions are optional, and this unit does not come with these functions.

RADIO FUNCTION INTERFACE

After turn on the unit, will enter to RADIO mode automatically; Or press RADIO icon on main menu or "MODE" button on panel or remote control to switch RADIO function:

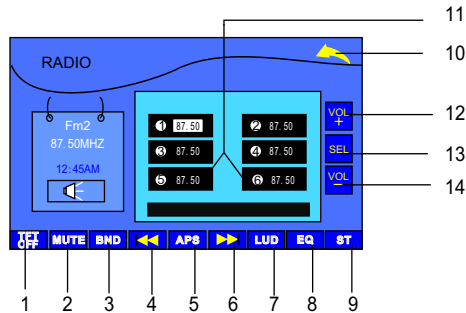

1. TFF/OFF: Close Screen
2. MUTE : Touch MUT icon to turn off the sound, press again to resume to previous volume level.
3. BND : Select FM/AM wave band
5. APS : APS signal scan Touch APS icon, will auto search FM signal.
- 4/6. <</>>: Channel increase/ reduce:
Adjust radio frequency, each plus / minus the frequency increase or decrease.
7. LUD: LOUD information
Touch it to turn on/off the loud.
8. EQ sound effect
There are "POPULAR, CLASSICALITY, ROCK" three kind of sound mode for circulate select, if going on will turn off EQ.
9. ST: STEREO
Press it to turn on or off.
10. : BACK TO MAIN MENU
11. Mode display
Mode display for reserve the RADIO frequency, press it to display the channel, Hold on touching the icon, can reserve the current frequency to relative position.
- 12/14. VOL+ /VOL-: volume
13. SEL audio function
Audio adjust button. Press it to choose "VOL""TRE""BAS""L/R""F/R", then press"VOL-" "VOL+" to adjust that you need.

Bluetooth function system



1. Dialing button: make and answer the phone.
2. pressing this button is the conversion of mobile patterns and bluetooth mode under calling state
3. Delete button: touch the button can delete the already input number.
4. Match button: touch the button can send out bluetooth match information.
5. Hang up button: end the call or refuse the call.
6. Quit the bluetooth system.
7. 0-#: number button
8. Status Information shows column.

Operating instructions

1. Starting up and enter into the bluetooth system picture.
2. Open up the bluetooth equipment of the mobile phone can search this unit's bluetooth equipment "CAR KIT". Then match the bluetooth by presentation.
3. Input 4 figures pass code "0000", this unit's bluetooth will be set up to the authorized equipment of the mobile phone. If the match is successful the status of the bluetooth picture will show "LINK OK"

Tips: If it unable to match please starting up again. After setting up the unit to authorized equipment, the bluetooth will connect or enter into mobile phone bluetooth system automatically. Select "CAT KIT" to connect it.


4. After you match successfully you can make and answer the phone comfortably. Under any system the calls will switch to bluetooth system automatically. It's convenient for you to operate. Within the effective limits, this unit can also transmit the music which is playing in the mobile phone. And can adjust the voice through mobile phone. (Within the effective limits of 10 meters).

Cautions:

This unit can only match with one mobile phone equipment which has bluetooth function.
The bluetooth function of this unit can only receive audio frequency information.

DVD MODE MENU INTERFACE

Press "MODE" on panel or remote control to switch to DVD menu; Or on main menu to touch DVD enter to DVD mode:

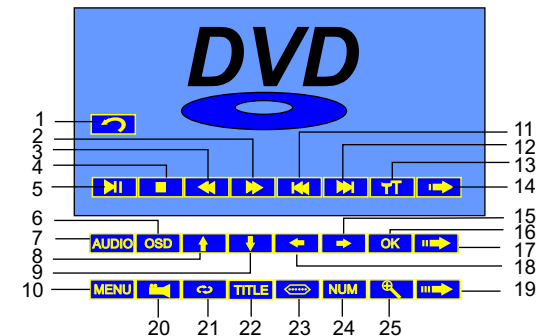

- 1 : Back to main menu
- 2/3 :Fast forward/Fast back
- 4 :Stop
- 5 :Play/Pause
- 6 OSD: Press it will display the disc information
- 7 AUDIO: Press it to select the audio language when the main unit is in play mode for DVD disc
- 8/9/18/15: Upward /Downward/Left/Right
- 10 MENU
- 11/12 :previous/Next
- 13 : Tools, Touch this item enter to AUDIO/VIDEO menu
- 14/17/19 : Next
- 16 OK : sure
- 20 :Angle
- 21 :Repeat
- 22 TITLE
- 23 :Subtitles
- 24 NUM: Selections songs
- 25 :Zoom

CD MODE BASIC OPERATION

When you play the CD disc, will display CD disc and track display mode on top of the DVD interface.

Note: When display the CD, the operation interface is the same as DVD operation. You can through the "AUDIO"button on remote control to choose the audio effect; And press "GOTO" button on remote control to choose the title and chapter display.


Note: On DVD display menu, some of simple function can use the touch panel to operate, but some functions have to through remote control to operate. If there are without disc inside, can't enter to DVD mode.

Above and "OK" functions only available on Some disc or Mp3/SD playing. under CD/DVD display condition, touching screen left the default is the former song or unit, right is the next

USB/SD Operation

When the machine is connect USB / SD, touch the main menu "USB/SD" icon, the screen displays "SD" or "USB",and will auto read and display the file. If under the playing mode, and insert the card, no need to choose the any function, will auto get into the display mode.

- 1. File bag
- 2. File
- 3. Mp3 Icon
- 4. JPEG Icon
- 5. Video Icon
- 6. Menu Icon

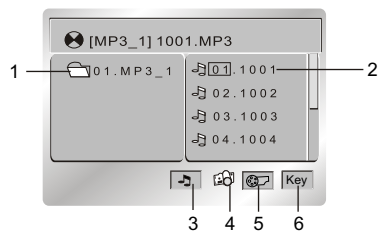


When display USB or SD card, touch panel menu is the same as DVD menu, also the same operation, Touch the DVD menu button move to the file bag, file,MP3 icon or JPEG icon. After more cursor to the display bag, then press "OK" to ensure the icon; The chosen file will be display by order.

After you choose the JPEG display, touch again the OK button to confirm this picture, then touch again the number button can change the picture direction to up/down/left/right.

Note: While the USB/SD is playing, and if you eject the disc or slot-in the disc, the display will pause for few second, this is normal situation. After finish the disc operation will resume the display. pull out the USB/SD when you want to stop playing

SYSTEM MENU SETUP

 Press "" picture on main menu, on AUX mode ,Click the screen will enter to system menu setup:

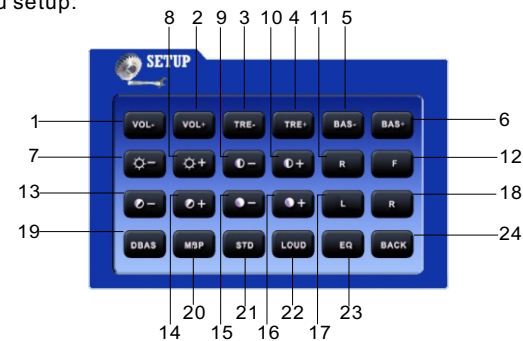

- 1/2.VOL-/VOL+: Volume adjust
- 3/4.TRE-/TRE+: High volume balance adjust
- 5/6.BAS-/BAS+: Low volume balance adjust
- 7/8. -/+ : Display picture brightness adjust
- 9/10. -/+ : Display picture contrast adjust
- 11/12.R/F: Rear/ Front audio adjust
- 13/14. -/+ : Display picture colorful adjust
- 15/16. -/+ : Display picture acutance adjustment
- 17/18.L/R: left / right audio adjust
- 19.DBAS: Sub-woofer on /off
- 20.MBP: Listen respectfully left/right on/ off
- 21.STD: Standard video select
- 22.LOUD: LOUD ON/OFF
- 23. EQ: sound select
There are "POPULAR, CLASSICALITY, ROCK" three kind of sound mode, can through EQ to select or turn off EQ.
- 24.BACK: Back (back to last step)

COMMON MENU SETUP

On main menu page, touch "" position can enter to currency menu setup:



- 1. : Exit menu
- 2. CLOCK SET: Touch "H" on panel and "M", then touch "+" "-" to adjust the time.
- 3. RDS MODE: Wireless Data Broadcasting System to open or closed. (only in the English mode, it can be set).
- 4. REARVIEW CAMERA: optional function.

5. RADIO FREQ: FM area setup

It's convenient for your to use this product, we already setup five RADIO area for your select, only through the touch screen text to choose the position which you listen to.


- 6. OSD LANG: Language Setting: Chinese and English Display is included for your choice.
- 7. MODE display picture: After choose the sub-menu, touch the relatively items to setup.
- 8. Touch Screen Calibration

When the touch-screen functionality offset, click it into touch-screen calibration. Or on DVD stop playing mode, use the remote control continuous input "ZOOM / ↑/↓" three keys may also enter the touch-screen calibration. When entering touch function, follow the prompts click the "+" center, Until succeed calibration then automatically exit.


AUDIO/VIDEO MENU SETUP

Under DVD mode, touch "TT" button enter to "AUDIO/VIDEO" menu setting interface: Same as below picture 1.2:

(Picture 1) Audio setting interface

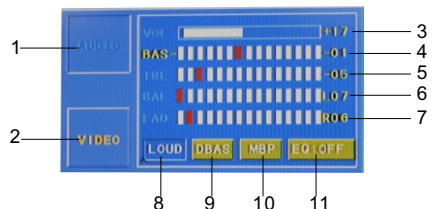

(Picture 2) Video setting interface

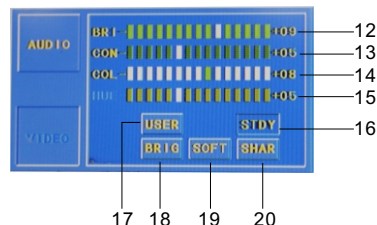


- 1. AUDIO: Audio mode. Touch this icon, the icon is concave, then will enter to audio setting mode.
- 2. VIDEO MODE: Touch this icon, the picture is concave, then will enter to video setting mode.
- 3. VOLUME ADJUST
Touch the "-" "+" icon on the screen, the volume will change.
- 4. BAS: Bourdon volume adjust, Touch the "-" "+" icon on the screen, the bourdon volume will change.
- 5. TRE: Alt volume adjustment, Touch the "-" "+" icon, on the screen, the alt volume will change.
- 6. BAL: Left and right track adjustment, Touch the "-" "+" icon on the screen, the left right track volume will change.
- 7. FAD: Front and Rear volume adjustment, Touch the "-" "+" icon on the screen, the front and Rear volume will change.
- 8. LOUD
Touch here can turn on or turn off the loud.
- 9. DBAS: Bourdon mode, Touch here to enter to bourdon display mode.
- 10. MBP: Listen position
Touch here to choose left or right listen position.
- 11. EQ: Sound effect mode
Touch here to choose the preset sound mode: popular, rock, classically.
- 12. BRT: Brightness
Touch the "-" "+" icon on the screen, to adjust the picture brightness.
- 13. CON: Contrast, Touch the "-" "+" icon on the screen, to adjust the picture contrast.
- 14. COL: Color, Touch the "-" "+" icon on the screen, to adjust the picture color.
- 15. HUE: Hue, Touch the "-" "+" icon on the screen, to adjust the picture hue.
- 16. STDY: STANDARD MODE
- 17. USER: USER-DEFINED MODE
- 18. BRIG: BRIGHTNESS
- 19. SOFT: SOFT
- 20. SHAR: SHARP

DVD SYSTEM SETUP

Under the DVD display mode, press the "SETUP" button on remote control, can enter to DVD system menu setup. Press the "↑/↓/←/→" button on remote control to move the cursor to setup the SYSTEM setup, LANGUAGE SETUP, AUDIO SETUP, VIDEO SETUP, SPEAKER SETUP and DIGITAL SETUP. Below is for the details menu for your reference:

1. SYSTEM SETUP

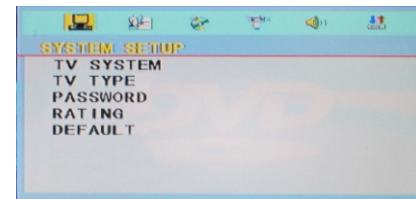

SYSTEM SETUP	
TV SYSTEM	NTSC
TV TYPE	PAL
PASSWORD	AUTO
RATING	
DEFAULT	

SYSTEM SETUP	
TV SYSTEM	
TV TYPE	4:3PS
PASSWORD	4:3LB
RATING	16:9
DEFAULT	

SYSTEM SETUP	
TV SYSTEM	
TV TYPE	
PASSWORD	----
RATING	
DEFAULT	

SYSTEM SETUP	
TV SYSTEM	4KID SAFE
TV TYPE	2G
PASSWORD	3PG
RATING	4PG13
DEFAULT	5PG-R
	6R
	7NC-17
	8ADULT

SYSTEM SETUP	
TV SYSTEM	
TV TYPE	
PASSWORD	
RATING	
DEFAULT	RESTORE


RENEW MANUAL

PASSWORD: this unit factory default have set password "0000", if you need, choose the password item to type it to break lock. After open lock, can choose children lock to amend the grade, after amend then back to password to type 4 number password, press ensure button to lock again.

RATING: this function only fit to the DVD disc come with children lock grade. Through it to control which kind of disc can read. Children lock limited grade have seven level, choose "no limited" to cancel the lock function. Factory default is no limited.

Note: If password have been locked, children lock setting will can't change.

2. LANGUAGE SETUP

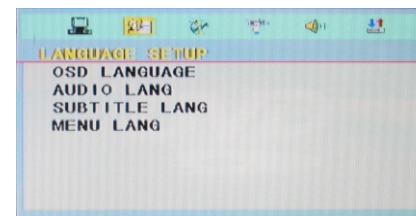


LANGUAGE SETUP	
OSD LANGUAGE	ENGLISH
AUDIO LANG	CHINESE
SUBTITLE LANG	GERMAN
MENU LANG	SPANISH
	FRENCH
	PORTUGUESE

LANGUAGE SETUP	
OSD LANGUAGE	ENGLISH
AUDIO LANG	CHINESE
SUBTITLE LANG	GERMAN
MENU LANG	SPANISH
	FRENCH
	PORTUGUESE

LANGUAGE SETUP	
OSD LANGUAGE	ENGLISH
AUDIO LANG	CHINESE
SUBTITLE LANG	GERMAN
MENU LANG	SPANISH
	FRENCH
	PORTUGUESE

LANGUAGE SETUP	
OSD LANGUAGE	ENGLISH
AUDIO LANG	CHINESE
SUBTITLE LANG	GERMAN
MENU LANG	SPANISH
	FRENCH
	PORTUGUESE


3. AUDIO SETUP

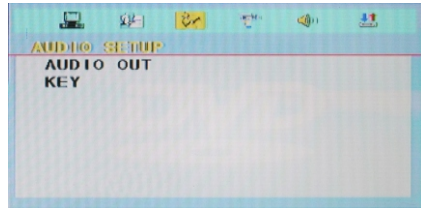

AUDIO SETUP	
AUDIO OUT	SPDIF/OFF
KEY	SPDIF/RAW
	SPDIF/PCM

AUDIO SETUP	
AUDIO OUT	#
KEY	+4
	+2
	0
	-2
	-4
	b

 4. VIDEO SETUP

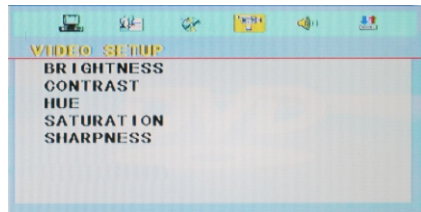

VIDEO SETUP	
BRIGHTNESS	12
CONTRAST	10
HUE	8
SATURATION	6
SHARPNESS	4
	2
	0


VIDEO SETUP	
BRIGHTNESS	12
CONTRAST	10
HUE	8
SATURATION	6
SHARPNESS	4
	2
	0

VIDEO SETUP	
BRIGHTNESS	+6
CONTRAST	+4
HUE	+2
SATURATION	0
SHARPNESS	-2
	-4
	-6

VIDEO SETUP	
BRIGHTNESS	12
CONTRAST	10
HUE	8
SATURATION	6
SHARPNESS	4
	2
	0


VIDEO SETUP	
BRIGHTNESS	8
CONTRAST	6
HUE	4
SATURATION	2
SHARPNESS	0

 5. SPEAKER SETUP

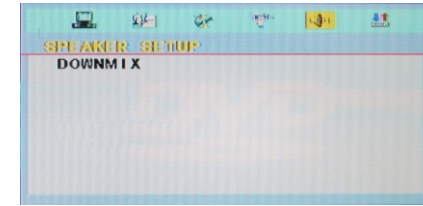

In the speaker set menu "LT/RT" "STEPEO" "VSS" three submenu choices.

 6. DIGITAL SETUP

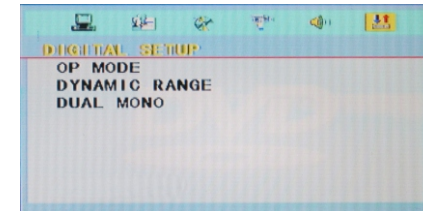

DIGITAL SETUP	
OP MODE	LINE OUT
DYNAMIC RANGE	RF REMOD
DUAL MONO	

DIGITAL SETUP	
OP MODE	FULL
DYNAMIC RANGE	6/8
DUAL MONO	4/8
	2/8
	OFF

DIGITAL SETUP	
OP MODE	
DYNAMIC RANGE	
DUAL MONO	STEREO
	MONO L
	MONO R
	MIX MONO

Function Index Sign






FM	FM Frequency range	87.5~108.0MHZ
	Noise limit sensitivity	15dBu
	S/N Ratio	50dBu
	Antenna resistance	75Ω
AM	MW Frequency range	530~1730KHZ
	S/N 30db	35dBu
	S/N Ratio	40dBu
AUDIO	Antenna resistance	75Ω
	S/N Ratio	80dBu
VIDEO	Max output power	4Ω60W*4CH
	Video output scope	1+/-0.2V
	Video Horizontal Resolaton	≥600

Warning

1. To ensure the accurate of touch function, please touch the center point of relative function.
2. There are build in anti-jamming system in touch screen, To prevent the wrong position touch, please keep to touch this function for 0.5 second, then the product will get respond for your instruction.
3. Please do not use the object, which is bigger than the function icon to touch the screen. Otherwise the touch function will failure or give the wrong operation to other function.
4. To ensure the panel safety, please don't press or use the sharp object to touch the panel.
5. Don't play the severity scratch disc, otherwise will damage the DVD play capability.
6. Be sure to distinguish the anode and the cathode when connecting the power. If connect wrong, the fuse in filter box will melt immediately to protect unit. Then please replace the same parameter fuse.
7. DC 12V should be best to connect with the power adapter to prevent from the over-voltage drop the may influence the normal work of the monitor.
8. Keep this machine away from too hot, or under effect of moisture, dust or oil smoke, avoid this machine from dropping or impacting, never extrude or chafe this machine with sharp objects.
9. Dangerous high voltages are present inside the enclosure. Do not open the cabinet, non-professionals can not disassemble unit
10. Installation should be very tight and secure. Preventing the fallen unit hurt people when moving on or a sudden brake.

Disc Notes.

Specifications

	DVDs	12cm
	Vedio CDs	12cm
	Audio CDS	12cm
	MP3 CDs	12cm
	JPG CDs	12cm

Disc type	DVD Vedio VedioCD	CD-DA MP3 JPEG
Video output	Vedio output Video output: 1.0Vpp/75ohm	
LCD panel	7" color TFT Pixels: 480xR. G. BX234	
Power	DC: 12V/10A	
Working temperature	5°C~45°C	

Simple Trouble-Shooting Guide

If your product fails, please follow the way of exclusion, if it is still unresolved, please contact the professional or supplier.

Symptom	Probable Cause	Solution
Black Screen	1.No12 voltage 2.Brightness or contrast ratio is too small	1. check the power is on or connect rightly 2. check the A/V Cable is loose or not 3. Increase the brightness and contrast ratio
NO picture	1.No sources output 2.The video concentric plug becomes loose	1.Check the output of VCD or DVD 2.Replace with the A/Vcable 3.Tighten the Video input cable
color picture	1 Video sources have no output 2.Color ratio should be re-adjust	1.check the video sources 2.Enter into the Menu to re-adjust
With a little regular light spots and color spots on the screen or black horizontal line in the picture	It is normal symptom in the active matrix display technology.	it is normal symptom in view range with a little regular light spots on display screen.
Unclear picture	1.Poor quality of the video sources 2.Bright & Contrast	1.Replace with the high quality videodisc 2.Reset Bright & contrast.
The outer cover of the monitor has been deformed	1.External temperature is too high. 2.The power has not been switched off for a long time.	1.The surround temperature should not exceed to 0-60 degrees. 2.Turn off the power after using the unit.

ALARM

For your safety, driver are advised not to watch the display when driving. It's prohibited in law of some countries when driving and operating to watch displayer.