

Notice to Customers

- This unit is manufactured with precision elements.
- Pay attention to protection against dampness.
- Prevent the hard object from scratching LCD surface.
- LCD may have a few color dots, which is common for the matrix display technology, and doesn't indicate defects or fault.

HEADREST DVD PLAYER

Compatible with:
DVD/VCD/CD/MP3/MP4/CD-R/CD-RW/GPS

***T*VIEW**

T718DVPL

HEADREST DVD PLAYER



USER'S MANUAL

Compatible with:
DVD/VCD/CD/MP3/MP4/CD-R/CD-RW/GPS /Divx

After-sales service terms

Dear customer,

Thank you very much for your choosing our products. For serving you well after-sales, please read the service terms as following:

1. From your purchasing date, we provide one year after-sales service, any quality problem which happened under conditions that the player can't work without any artificial factors.
2. User can contact local distributing outlet or authorized maintenance center for free service if any quality problem within warranty period.
3. We will charge for some spare parts for fixing the problem, which happened under artificial dissembling or damage, even within the warranty period.
4. We will charge for spare parts and documentary for fixing the problem, which happened beyond warranty period.

Please fill the keep this warranty card and ask for stamp from distributors/sellers.

Distributor/seller:

Content

Features.....3

Disc for playback.....3

Precaution.....4

Brief Instruction.....4

Accessories.....4

Remote controller.....5

Installation and connection method.....5

Main components.....6

Name of the Player.....6

Remote control.....7

Basic Operation.....8

Function explanation.....9

Menu/PBC.....9

Title/Return.....9

Display.....10

Search.....10

Subtitle.....11

Audio.....11

Angle.....11

Zoom.....11

Repeat.....12

Mute.....12

Play/Stop.....12

Mode switch.....12

Menu adjusting.....12

Volume.....12

System menu setup.....13

Functions operation.....13

JPEG.....14

Trouble Shooting.....14

Technical specifications.....15

Please read the manual carefully before using the product and keep it easily accessible for future reference.

Important instructions for your safety:

Do not turn on, watch or operate the unit while driving.

In some countries and regions, it may be against the laws.

The product is comprised of many precision electronic components.

Self- renovation or disassembling may cause malfunction to the device, bodily injury, and voids your warranty.

Note:

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

High voltage inside! Do not open or dismantle the unit. Do not repair the unit yourself.

Take it to your local authorized service center.

The product is a laser product. Make sure to read instruction manual before operating.

Do not try to open the covers to avoid direct laser radiation.

When the cover of the unit is opened or the interlocking system gets unlocked, the laser light can be visible. Direct vision of laser beam is hazardous to your eyes.

In order to prolong the life of the unit which has a large scale of integrate circuits and precision pick-up device. Frequently turning the unit on & off may damage the unit.

Turn unit on & off in intervals of 5 seconds or greater.

Note:

LCD may have a few color dots. This is common for the matrix display technology, and doesn't indicate defects or faults.

The player does not work, or no disc

Insert the disc or check if the disc is placed up side down or not. Place the disc with the playback side down.

The disc is dirty. Clean the disc.

The unit has moisture on the inside, take out the disc and power off unit for about one hour.

Disconnect the power cord and plug the power cord into the wall outlet securely again to reset unit.

The remote control does not work properly

There is an obstacle in the path of the remote control and the unit.

Remove the obstacle, check if remote control points to receiver or not.

The batteries in the remote control are depleted. Replace the batteries with new ones.

Technical Specifications

Panel	TFT LCD
Screen size	7 Inches (16:9)
Pixel	480 x 3 (RGB) x 234
Temperature	Operation: -10°C ~ 55°C; Storage: -30°C ~ 75°C
Backlight	LED
Brightness	350 cd / m ²
Color system	PAL / NTSC
Compatible formats	DVD、VCD、CD、MP3、MP4、CR-R、CD-RW、DVD-R、DVD-RW、DVCD
Resolution	≥ 500
S/N	≥ 90 dB
Isolation	≥ 65 dB
Audio input/output	1.6V ± 20%
Video input/output	1V _{p-p} ± 20%
Power supply	DC 12V
Power	≤ 12W
Product Dimension	280mm x 220mm x 140mm
Product N.W	1.6kg

Your attention please:

The design and specifications are subject to change without notice.

JPEG

This unit can play the picture CDs with JPEG format files, which is the most common picture compressing format presently.

Press Number Buttons to select Pictures

(1) Place the disc in the loader correctly, and the player starts searching.

A message shows on the screen.

(2) Press Number buttons to select the picture album.

Make selection via disc menu

(1) Place the disc into the unit, player will start searching through the disc.

Main menu will show on the screen, select from No.1 using the Direction Buttons.

Press Play to confirm.

(2) Press Direction Buttons to select picture in current picture album, press play to start.

(3) Press Directions Buttons to select other pictures when stopped.

(4) Return to previous menu by selecting File while stopped. Then Press Play.

Troubleshooting

Please reference this Troubleshooting guide to resolve the problems listed below:

Power off: no power supply

please check to make sure the plug is well connected and that the cable is solid.

No or bad audio cables

Please check to make sure cables are connected properly.

Please check audio cable setup.

Please adjust the receiving frequency to equal the transmitting frequency.

No picture

Check to make sure cables are connected properly.

Check to make sure video Input is set up correctly.

Check to make sure the monitor is turned on.

Poor Picture Quality




The color is not properly adjusted; please use the remote controller to adjust it.

The disc is scratched or spotted.

Features:

- ▶ Ease of Installation, Non hazardous design
- ▶ 135-185 mm adjustable for the steel tubes, making it to be suitable for the seat Requirements, the diameter of the steel tube included 10/12/12.7/14/16mm.
- ▶ The display unit has built-in DVD player
- ▶ Built-in wireless FM stereo transmitter
- ▶ Built-in IR transmitter, to be received by headphone, without disturbing others
- ▶ AV input channels, compatible to GPS
- ▶ AV output channels, could be connected with other monitor

Discs for playback

Type	Icon	Content	Size
DVD		Video & Audio (dynamic image)	12cm/8cm
VCD		Video & Audio (dynamic image)	12cm/8cm
CD		Audio	12cm/8cm
Mp3	MP3	Audio	12cm/8cm
Mp4	MP4	Video & Audio (dynamic image)	12cm/8cm

Disc-related terms

Title (DVD only)

The main film content or accompanying feature content or additional feature content or music album. Each title is assigned a title reference number enabling you to locate it easily.

Chapter (DVD only)

Section of a picture or musical piece which are smaller than titles.

A title is composed of one or several chapters. Each chapter is assigned a chapter number that enables you to locate the chapter you want. Depending on the disc, no chapters may be recorded.

Track (Video CD and audio CD only)

Sections of a picture or a musical piece on a video CD or an audio CD

Each track is assigned a track number, enabling you to locate the track you want.

Diagram of DVD disc


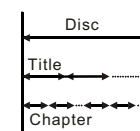 


Diagram of VCD/CD

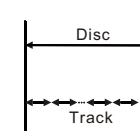 

Precaution

Safety

Please check in-car voltage before using this unit to make sure it's compatible with working voltage.

Be sure the plug is properly connected with socket and do not pull the power cable.

The laser of DVD loader is hazardous to your eyes so please do not disassemble unit on your own, take it to a technician to repair.

Placement

The storage temperature range is from -30°C to 75°C, operating temperature ranges from -10°C to 55°C.

Do not expose this unit to rain or moisture. Avoid dropping or any other impact to the unit.

Condensation may occur on the unit under the following condition.

Due to a sudden change in temperature and if the vehicle's AC is turned on, there will be a vapor formation on the screen. To de-vaporize it please take out any discs from the unit and power it ON for about one hour.

Please wipe the machine with a soft dry cloth.

Note:

Handling the disc:

Do not touch the playback side of the disc. Hold the disc by the edge to keep the that date surface free of fingerprints which will result in a poor reading.

Do not stick paper or tape on the disc.

Storing discs:

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Cleaning discs:

Fingerprints and dust on the disc can cause poor picture quality and sound distortion.

Before playing, clean the disc with a clean, soft cloth. Wipe the disc from the center out.

Do not use any solvents such as it will damage the surface of the disc.



Included Accessories

Power cable	1 piece
Tube (Outer)	4 sets (8 pieces)
Remote control	1 piece
User Manual	1 book
Game Disc (Optional)	1 piece
Joystick (Optional)	2 pieces

System menu setup

Press Setup button in the remote control, the menu setup will then appear. This menu includes General Setup, Preference Setup, Audio Setup and Video Setup. Press the Enter button to setup for single page, Move up/down to select, Move left/right to adjust, Press Enter to confirm the desired item.

Functions operation (Choosing relevant models for detailed functions operation)

1. Basic Operation

- (1) MP3 can be played by List mode, Program mode and mode.
- (2) Press Repeat to play, repeat playing one song or play by list.

2. Disc/MP4 Playing

- (1) Normal mode: Place the disc into loader correctly. Player will begin to search the disc and enter into normal playing mode.
- (2) Move Direction button or use the number to select the desired item in submenu, then press Play to start.
- (3) Press Stop first, press Direction button to select other submenu.

3. USB/MMC/SD(MS)

Under DVD mode, insert USB/SD/MMC/MS memory card, and press this on the remote control or front panel.

Note: Please do not remove hard disk during operation. This would lead to unit failure.

4. TV Function (Optional)

- (1) Insert the outer TV antenna to the signal port of the DVD machine, and then press the model switch to the TV status Bar.
- (2) Press the menu key stroke switch to the TV Enactment Page, and then make the TV system and TV sound to local system.
- (3) Move the cursor key to the Automatic Searching, Press the ENTER to begin the Search, you can enjoy the TV programs after the search. Press the Auto Zoom on the remote can enter to the searching system directly.

5. Games Function: (Optional)

Put attached Games Disk into this player, and insert 2 attached games joysticks, play the double or signal games by pressing remote control and joysticks.

Repeat

(1) While playing the DVD disc, press Repeat for the first time to repeat playing one chapter, press Repeat for the second time to repeat playing one title, press repeat for the third time to repeat playing the entire disc, and press Repeat to cancel.

(2) In PBC off mode:

While playing the VCD disc, press Repeat for first time to repeat one song.

Press Repeat for the second time to repeat the entire disc.

Press Repeat for the third time to cancel.

Mute

Press Mute one or more times to select mute on or mute off.

Play/Stop

While normal playing, press to Pause/Play, press and hold to Stop.

Mode

Press this button to select between DVD and AV.

Note: The mode will be remembered when powered off.

Menu

Press the Menu button and the screen will show the display for adjusting, Press Volume to select desired displays: Picture, sound, mode, Press Previous/Next to select, Press Volume to adjust or Press Up/Down button in remote control to select, Press Left/Right to adjust desired parameters, Press Menu button to back, and the parameters will be memorized.

Note:

"Parameters Memorizing" is the setup parameter for last Power Off.

"Setup Reset" is factory parameters, all functions can be reset.

 
While the unit power off or no signal, the IR transmitter will close automatically after a while.

Volume

Press + - button, it's invalid for adjusting volume of IR/FM, but valid for the player and earphone.

Note: Volume can be memorized.

Battery replacement Instructions for Remote controller (shown in picture)

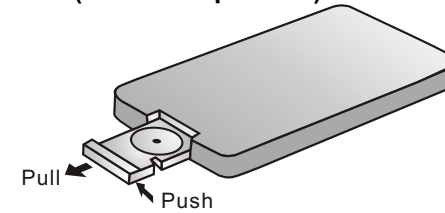

*Press the tab on the underside of the battery cover and at the same time pull out the battery tray.

Insert the battery.

Take the CR2025 type battery with stamped (+) mark facing upward. Insert the battery tray into the remote control.

*Point the remote controller to infrared receiver window of your device within 60 seconds and 3 meters away, without any batteries between them.

*The life-span of the batteries is about one year, always replace the old set with a new set of batteries.

Please take out the battery when the remote controller is not being operated for a long time.

*Please pull out the separation film prior to using the remote controller.

WARNING

Store the battery where children cannot reach. Do not recharge, disassemble or heat the battery or dispose of it in a fire.

Installation and wiring

Check to make sure the appearance and specification are a good fit. During the process, choose the right accessories and tools.

 
Installation step:

Step 1: Remove original pillow

Step 2: Choose the correct size tube, in order to fit correctly.

Step 3: Connect the power cord and the Video cable

Step 4: Set the pillow in place

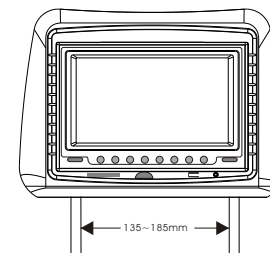

(For reference only)

 


Included Tube Sizes Diameter:
tube diameter: 12mm, 12.7mm
14mm, 16mm (1 set for selection)

HEADREST DVD PLAYER

Installation and wiring


The headrest DVD player has an AV input port and an AV output port. The AV input port can connect with other sources such as a game. The AV output port can connect to other displays.

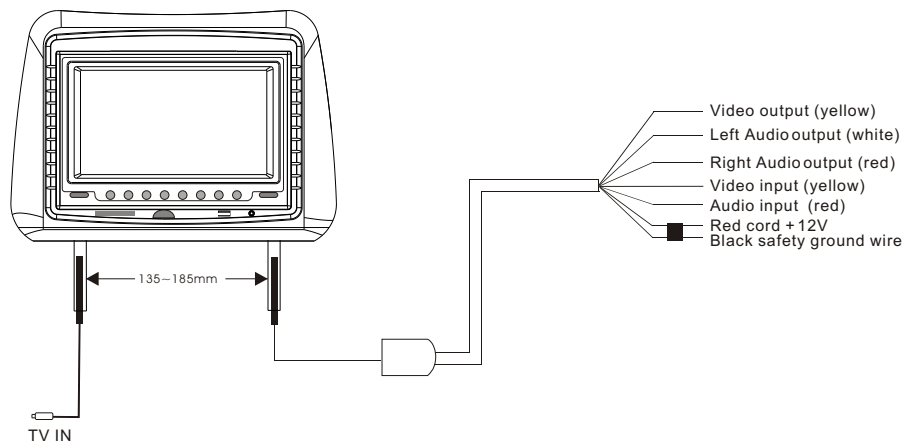

Note:
The appearance, specifications and installation fit are not suited for all vehicles. Please pay attention to this before installation.

Main component

 Name of the Player

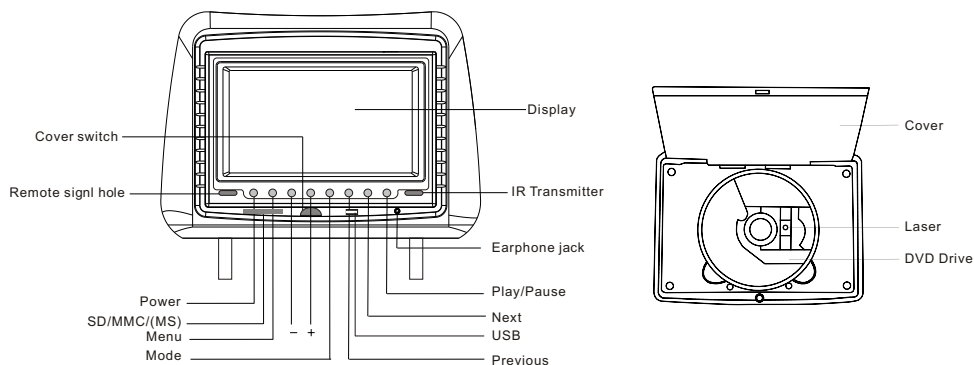

【6】

HEADREST DVD PLAYER

(2) Search by time

Press Search, screen shows:

Title 03/10 time : :

For sample: Press Number button to input 0,1,0,6,1,8, the player will play from the point at 01:06:18

Chapter 01/04 time : :

Title 03/10 time 01:06:18

(3) Playing VCD discs

Press Search to check the elapsed time for the entire disc, the item and the Current item during VCD disc will play.

Press Number button to input a time, the player will play from the point you've selected.

Subtitle

While playing the DVD disc with multi-subtitles, choose the desired subtitle, and it will show on the screen.

When this feature is not available on the disc, it will not show the screen.

Note: This feature setting is valid only for discs which has multi-language.

Audio

There is multi-language feature while the DVD disc is playing.

When playing discs with this function, you can select the desired language by Pressing Audio.

The left audio, right audio and the stereo shows on the screen while playing the VCD.

Disc. You can select the desired language when playing the disc with dual language.

Note: This feature setting is valid only for the current disc which has multi-language settings.

Angle

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. Press ANGLE repeatedly during playback to select a desired angle. (This is only for discs with this ANGLE function)

Zoom

 
In this mode, the dynamic or still picture can be zoomed in by up to 4x. press Zoom three times, the picture is zoomed in by 2x, 3x, 4x. Press Zoom again to return to the normal playing mode.

【11】

Display

User can check the elapsed time or remaining time of current title and chapter by pressing Display. Continue to press Display and the screen will show as follows:

(1) When play DVD disc, Press Display, screen shows the elapsed time of current title, remaining time of current title, elapsed time of current chapter and remaining time of current chapter, Press final time to exit.



(2) When playing VCD in PBC ON mode, Press Display and the screen will show elapsed time and remaining time. Press Display for the third time to exit.



When playing VCD in PBC OFF mode, Press Display and the screen will show the elapsed time of the current item, remaining time of the current item, elapsed time of the entire disc, and remaining time of the entire disc. Press Display again to exit.



 
Note: When playing MP4's, the Display has some features.

Search


Press Search, input a title, a chapter or a time and the player will start playing from the desired point to the end point.

(1) Search a title or a chapter:
Press Search, screen shows as below:

Press Left or Right to select one title
For example: press Number 3 to select title 3, select Chapter 1 by pressing direction Buttons, the screen will show:



Panel of the Remote Control

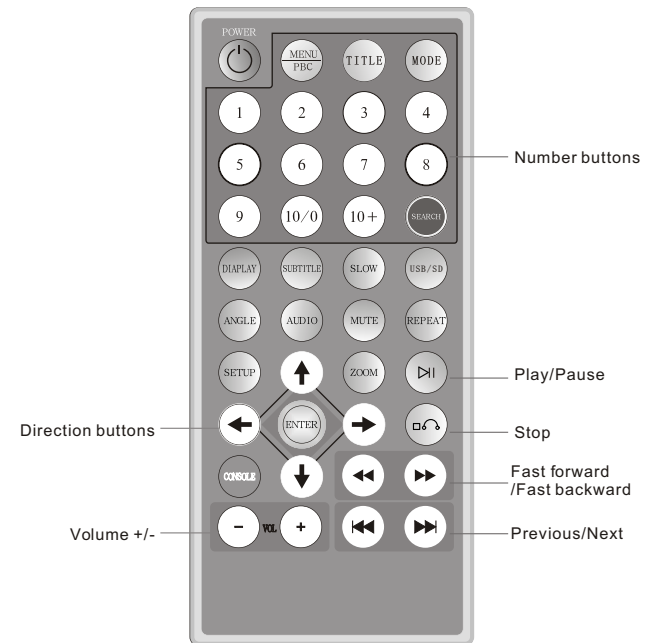 

Note:
Because of some difference when make the disc, some buttons maybe valid when press the remote control, and then the screen will display “∅”

Basic Operation

Make sure that you have correctly connected your unit as described earlier in this manual.

Power on and CD loading

1. Press the Power button to turn ON (Power indicator is OFF), as the player will start loading the start-up menu.

2. Press the Open button to open the disc flap, insert the disc, then close the disc flap.



3. While playing DVD discs, please select an item in the DVD menu or the title menu.

4. Press Direction Buttons or the Number Buttons to select the desired item, then press Enter or Play to start.

5. The player will start automatically. Press Pause to stop temporarily, press Pause or Play again to cancel Pause. While playing the DVD disc, press stop for memory stop, Press Play for memory play and press Stop twice to stop playing and cancel memory.

6. While the DVD disc is playing, press Fast Forward to play at 2x, 4x, 8x, 16x, 32x forward speed, the screen will show the following.



Press Fast Backward to play 2x, 4x, 8x, 16x, 32x reverse speed, the screen will show the following:



Press Play to resume to normal playing mode

7. While the DVD disc is playing, press the Slow button, to play at 1/2, 1/4, 1/8, 1/16 speeds. The screen will show as the following:



Press Play to resume to normal speed play mode.

8. Previous/Next

To select the previous item or chapter press the Previous button. To select the Next item or chapter, press the Next button.

Note:

If there is no chapter/track on the disc, then the above functions will be disabled automatically.

Functions Explanation

Menu/PBC

- (1) Press Menu/PBC to return to the main menu or the Title menu while playing DVD disc.
- (2) While playing VCD disc, press Menu/PBC to turn PBC on or off. (Not functional if DVD disc is loaded)
- (3) Only if returned to the main menu can a new song be selected in the PBC-on mode.
- (4) Pressing the number buttons can select one song in PBC-off mode.

Title/Return

- (1) While playing the DVD disc, press Title to enter to the title menu directly, select the desired item by pressing the direction buttons or number buttons.
- (2) While playing VCD 2.0, press Title to return the previous menu; however, this function is disabled in PBC-off mode. (Only for functional disc)