

## Notice to Customers

- This unit is manufactured with precision elements.
- Pay attention to protection against dampness.
- Prevent the hard object from scratching LCD surface.
- LCD may have a few color dots, which is common for the matrix display technology, and doesn't indicate defects or fault.

**ATTENTION:**  
**FOR YOUR SAFETY, PLEASE DON'T**  
**OPERATE OR WATCH DISPLAY WHILE**  
**DRIVING.**

# ***T*** ***VIEW***

---

## **T91SV**

**TFT LCD SUN VISOR MONITOR**



---

## **USER'S MANUAL**

---

## Control panel



## Performance parameter

Type:TFT LCD Monitor

Display size:9"

Display format:16:9 or 4:3

Power:About 3W

Power supply:DC 12V

System:NTSC/PAL/SECAM


Operation temperature:-5℃ ~+40℃

Pixel:640(W)×R/G/B×234(H)=336960

Overall dimension:26mm(H)X170mm(L)X 400mm(W)


Weight:about 808g

## Remote control

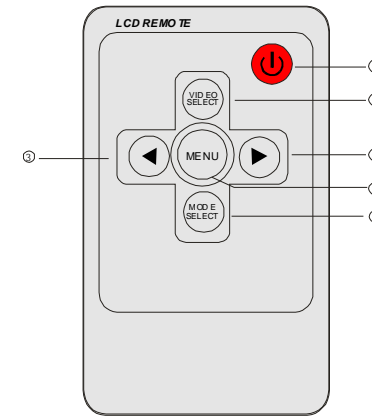

- ① Power Button (⏻)
- ② Menu Button
- ③ Menu - Button (◀)
- ④ Menu + Button (▶)
- ⑤ Video select : Video 1/Video 2
- ⑥ MODE Select

## Method of wiring

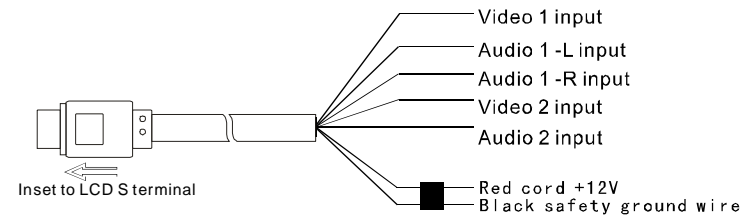

## **Notes:**

- I , Please make the remote control align the infrared-receiving window when you operate it
- II ,please not oppress, drop,moisten or dispatch remote control
- III,please not press the key continuously,the gap time atleast is 2 seconds after it's operated.